


BODY LABEL

INSTALLATION INSTRUCTIONS

1-877-843-3869
1-877-843-3869
091096

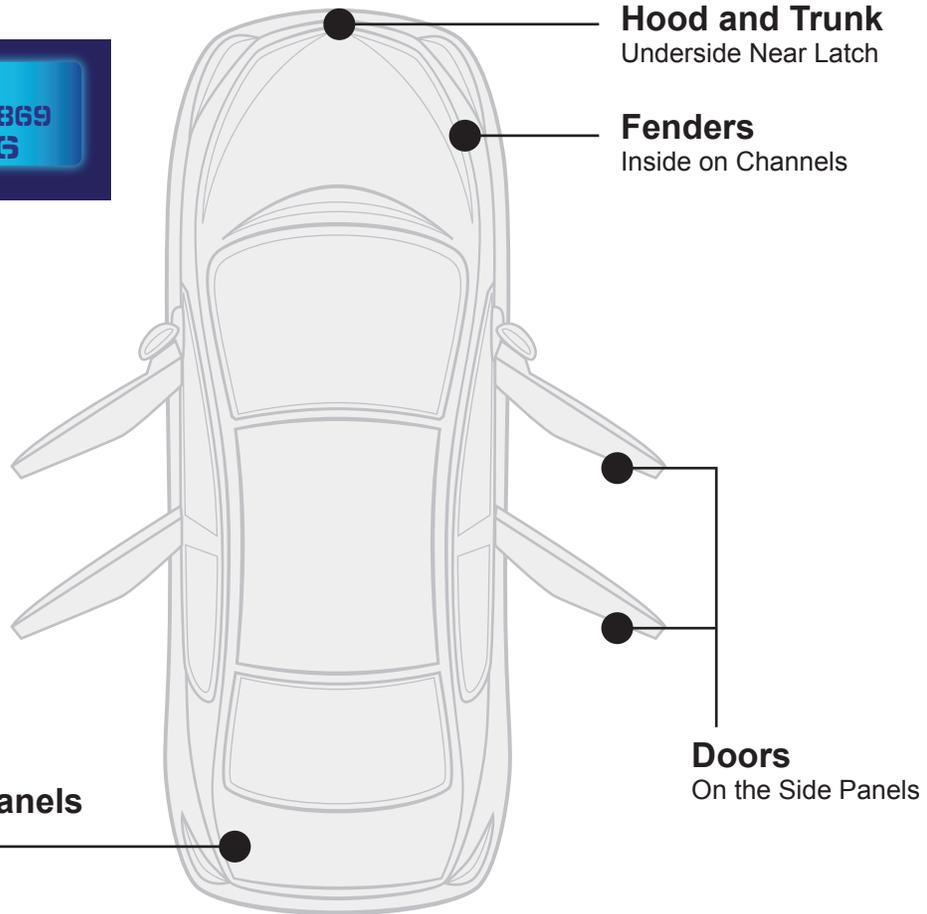

Rear Quarter Panels

In the Trunk
Lid Channels

- Identify the locations to be marked with the body label. Labels should not be visible unless the doors, hood, and trunk are open. Doors (2/4), Hood (1), Fenders (2), Quarter Panels (2), Trunk Lid (1).
- **Body label** is to be applied to a painted metal surface, so ensure the area is clean, grease, oil and wax free. If area needs cleaning, it is recommended that isopropyl alcohol be used as a cleaning agent.
- Gently peel the label from the backing **FROM TOP CORNER OF LABEL**. Before applying the label, position it over the location to be sure alignment is correct, (once installed may not be removed). Apply the label to the area to be marked. Gently press the label to remove any wrinkles or air bubbles, then press firmly to completely affix label to the painted surface.
- Repeat these steps for each label to be affixed.